




OPERATING INSTRUCTIONS FOR L-722 HEX WRENCH INSTALLATION TOOL

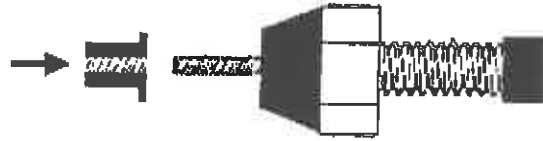


- 1) Engage all threads of the BNP on the pull-up stud. Advance anvil until it is tight on head of BNP. Insert BNP into installation hole.

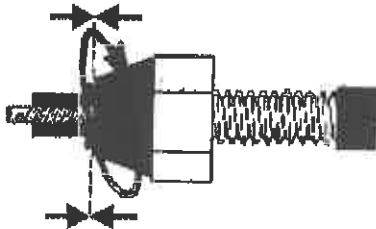


- 2) Place hex wrench in socket of jackscrew and hold stationary. Turn hex nut in clockwise direction with a wrench while holding tool at right angle to the work.

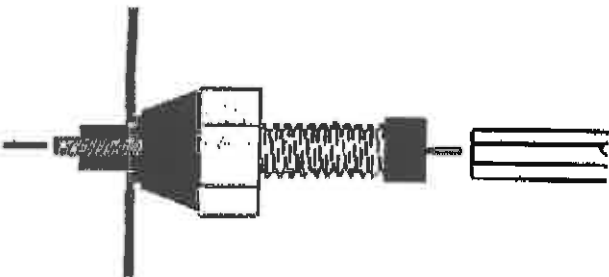

- 3) Turn nut the required number of turns – or until firm resistance indicates a complete upset of the BNP. (A box end ratchet wrench will speed up this operation.)

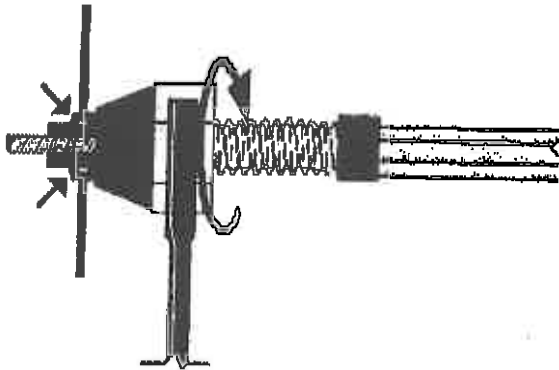

- 4) Break nut loose with counter clockwise movement. Remove both wrenches from the tool.

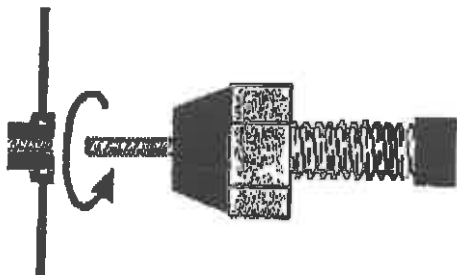

- 5) Remove tool from BNP by revolving entire tool in counter clockwise direction.